

東海道五十三次

大津宿

OTSU JUKU



CAUTION

Read before assembly


1. This is an assembly model. Please read the assembling instructions carefully before beginning assembling.
2. Tear and discard the plastic bags contain parts after taking out the parts inside since the plastic bags may cause suffocation if small children place the bags over their head or swallow those.
3. Please sand the wood parts neatly with a sandpaper or the like, and dispose the wastes from polishing in a rubbish bin. Please be careful not to get injured, as they are easily broken.
4. Some parts have sharp edges. Please do not use them for any other purposes. Take extra cautions if you have small children.
5. Some parts are small. Please do not swallow them by mistake. Take extra cautions if you have small children. Accidental ingestion may cause suffocation.
6. You may need to use nippers, knives and files for assembly of parts. Careless handling may cause injuries by the tool edges. For children younger than 12 old, parents or a guardian must attend and carry out handling the tools.
7. Please pay attention to the following tips for using adhesives and paints:
 - Do not use them in an enclosed room. There is a danger of intoxication.
 - Never use them near the source of flame. There is a danger of ignition.
 - Do not put cement or paint in your mouth, eyes. If ingested or taken by mistake, please wash away with a large amount of water immediately and consult a doctor."
8. Please note the parts are subject to change without prior notice.

PARTS LIST

No.	Wood parts	QTY	No.	Wood parts	No.	No.	OTHER	No.
1	Roof materials, Others	1	11	Round bar (axle) $\phi 2 \times 22$	2	1	Hemp cord	1
2	Wall materials	1	12	Bar material $1 \times 1.5 \times 150$	1	2	Powder: Yellow ochre	1
3	Cattle, Tree, Others	1	13	Bar material $1 \times 5 \times 150$	1	3	Trees	1
4	Oxcart, Others	1	14	Pavement stones	60	4	Paper sheet (Shop curtain, Signboard, Tatami mat, Ricebag, Shoji screen)	1
5	Eave materials, Others	1	15	Board of decoration base $3 \times 134 \times 194$	1	5	Pattern of the pavement stones	1
6	Wall plate	1	16	Frame of decoration base (Long)	2	6	Film with a painting of water	1
7	Roof tile materials	2	17	Frame of decoration base (Short)	2	7	Rope	1
8	Cabin (small) $15 \times 25 \times 32$	1						
9	Cabin (medium) $20 \times 30 \times 45$	1						
10	Round bar (straw ricebag)	10						

● Laser-cut parts

Connecting part

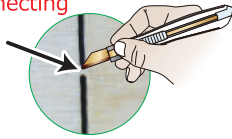


- Cut off the laser-cut parts by cutting the connecting parts from the surface or back side.

< After-sales services >


If some of the parts are missing or damaged during assembly, please contact us by postcards, fax or e-mail, with clear description of necessary information including the name of product, the name of requested parts, number of the parts, requested quantity, your name, address, email address and telephone number.

Prepare the necessary tools for assembly.


Cutter knife

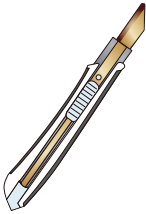

Tweezers

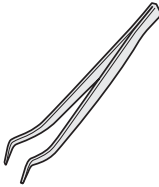

Ruler

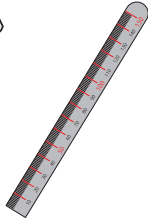

Scissors




[Woodworking bond]



[Instant glue for woodworking]



Paste sandpaper on a small round bar or chopsticks to make rubbing works easier.

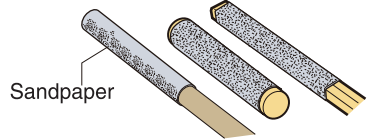

Sandpaper

Paints for use



※Apply the oil stain before assembly.



Liquitex Neutral Grey 5
Location of use:
roof tiles



Tamiya XF-5: Flat green
Location of use:
pine trees







oil stain:
Mahogany dark brown


1 <Assemble the cabin (small)>




● Attach 6 D & C to 8 first.

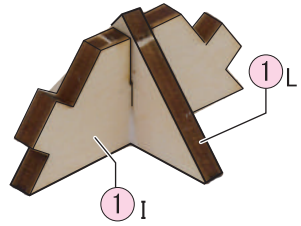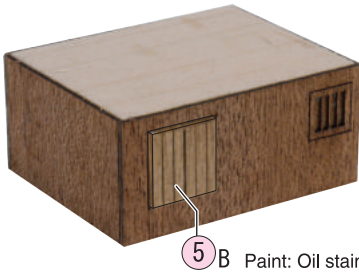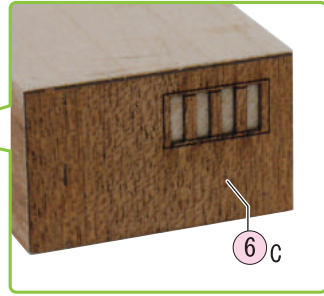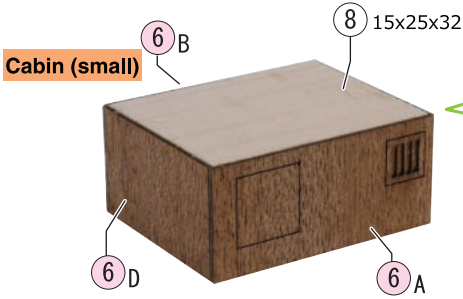


● Glue the roof plates on the cabin

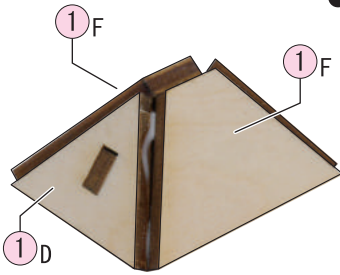



2 <Assemble the cabin (medium)>

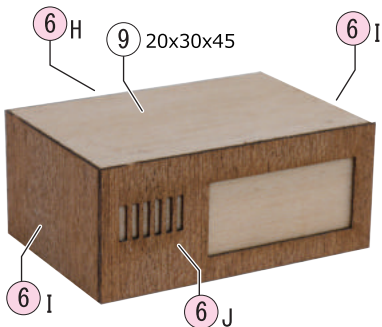

Cabin (medium)

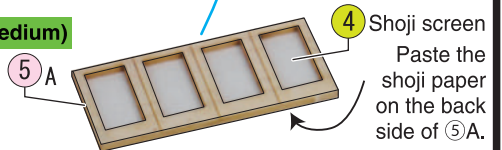

3 <Assemble the roof of the cabin (medium)>



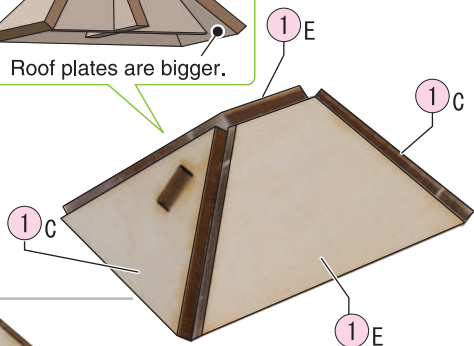
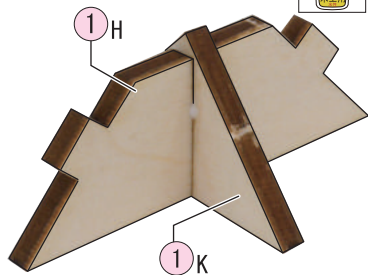


● Glue the roof plates on the body of the cabin.



Cabin (medium)



4 <Assemble the shop cabin>

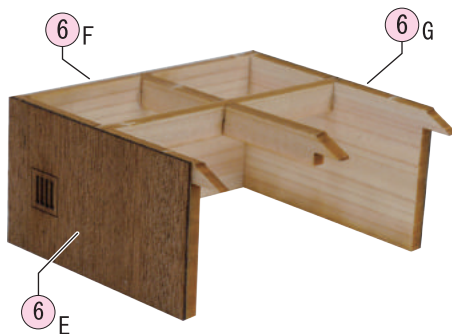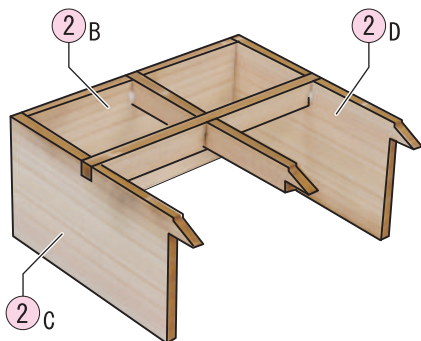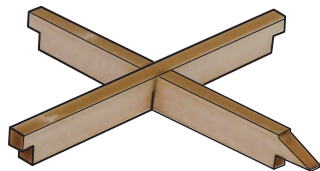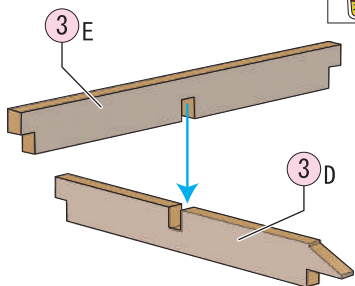

5 <Assemble the shop cabin>

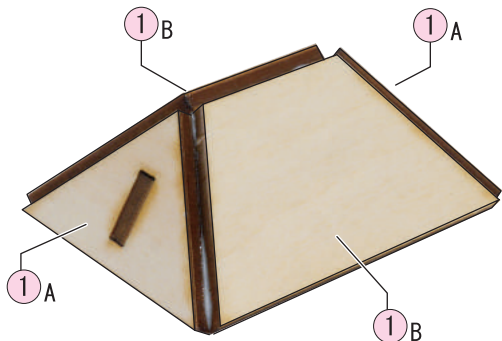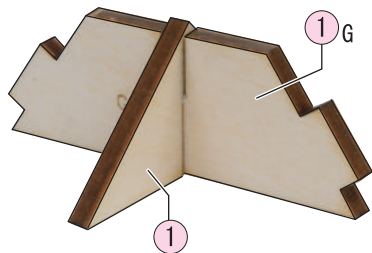


- Align the center of roof plates with the main part of the shop cabin and glue.

- Paste pieces of the ① hemp cord in each gaps of roof plates.

Hemp cord

Cut the cord to 70mm

※ Apply the woodworking bond for one line on the center of the roof and paste a piece of hemp cord on it.

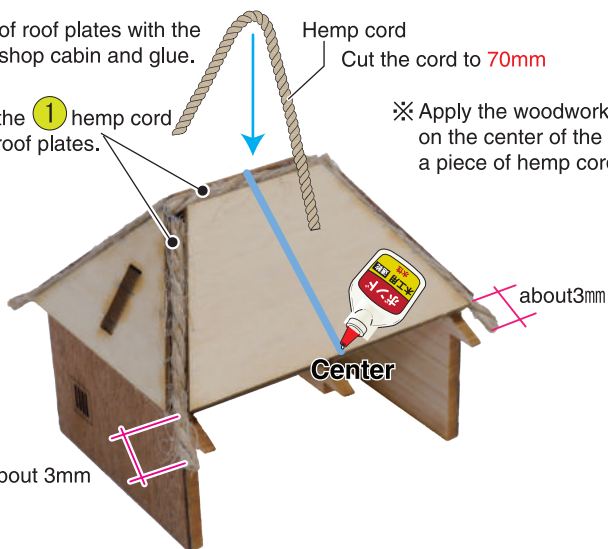


Stick it out about 3mm

- Cut the cord in the necessary length and paste it one by one.

※ Afterwards all attached hemp codes is to be trimmed to align in a straight line.

- Cut the cord in the necessary length and paste it one by one.

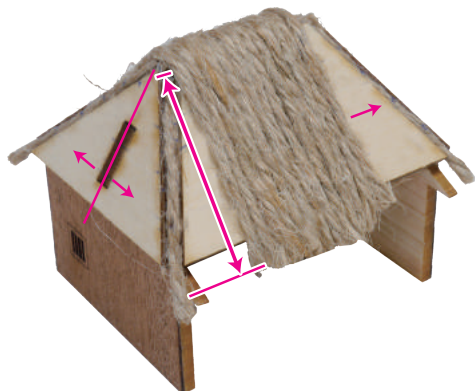

6 <Assemble the shop cabin>



- Trim the attached pieces of the hemp cord 2mm longer than the length of the roof plates.




about 2mm

- Attach the eave plate



Paint: Oil stain: Dark brown


Insert it until it touches the back.

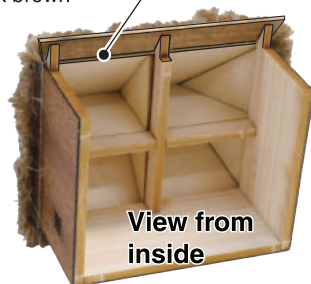


View from inside

Paste a piece of the cord on the center of the roof

Cut ① Hemp cord by 25mm.

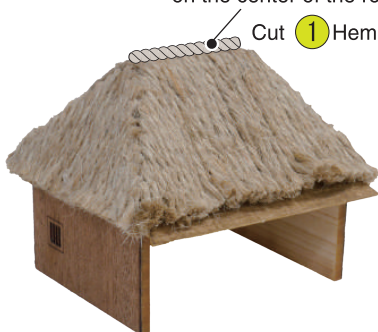

- Write down several lines on the thatched roof by pencil at intervals of 6mm from the bottom.

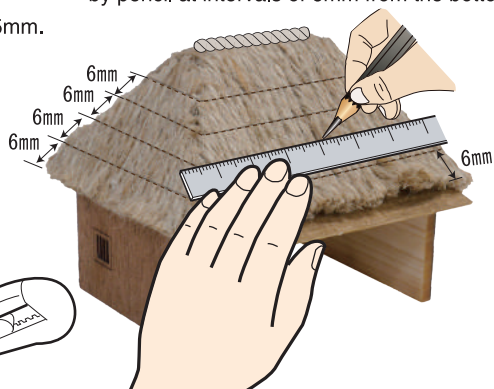

- Make slits along the pencil lines with a cutter knife.



 Be careful not to get injured, and make cuts lightly several times.


7 <Assemble the shop cabin>



- Attach the ridge board

Cut it to the width of 28mm

Apply the woodworking bond in very thin.

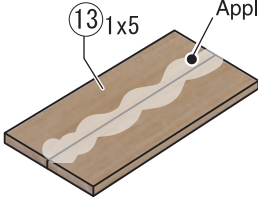

Turn it over and bend



Paste a piece of the cord on the center

Stick it out about 1mm




Paste several pieces of the cord on the ridge board so as to cover the board completely.



- Cut the rope to the appropriate length and paste them at even intervals about 5mm for each.

- Lightly rub the thatched roof vertically to the roof with sandpaper to make fluff the surface.

8 Rope

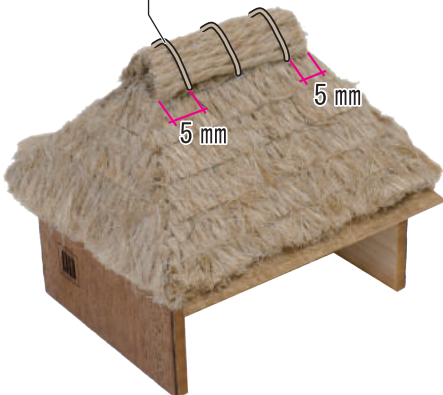


8

<Assemble the shop cabin>



- Same as the shop cabin, paste pieces of the cord one by one from the center of the roof to fill the gaps of roof plates.

Cabin (medium)

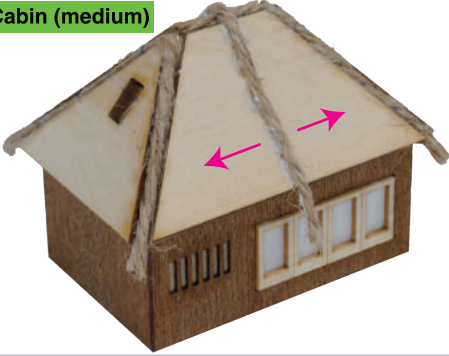

- Write down several lines on the thatched roof by pencil at intervals of 6mm from the bottom.



Paste one line in the center of the roof

Cut ① Hemp rope by 18mm



※ Be careful not to get injured

Glue the ridge board and paste one line in the center

⑬ 1x5

Stick it out about 1mm



- Paste hemp ropes on the eaves plate
Paste 3 thin ropes at even intervals.



9 <Make the thatched roof of the cabin (small)>




- Same as the shop cabin, paste the linesone by one from the center of the roof to fill the gaps of roof plates

Cabin (small)



- Attach a ridge board in the center of roof.
Write down lines by pencil at intervals of 6mm, and make cuts with a cutter knife.



- Paste hemp ropes on the ridge board.
Paste 3 thin ropes at even intervals.

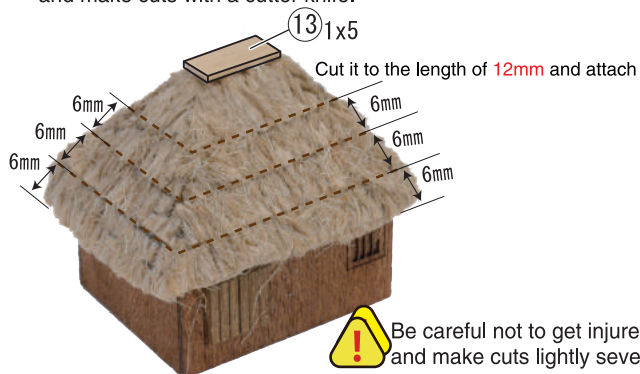

10 <Assemble benches for cabins (medium & small)>



Cabin (medium)

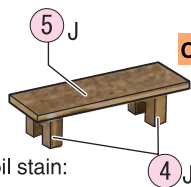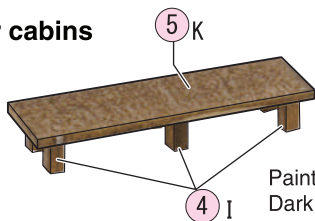


Cabin (small)


Cabin (medium)

※ Attach at the same intervals

Cabin (small)

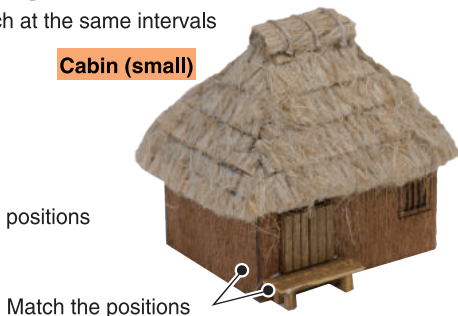


11 <Attach the bench to the cabin (medium)>

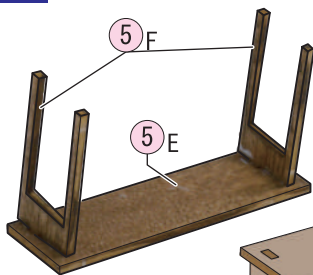

● Attach the shade over the bench of Cabin (medium)

Paint: Oil stain: Dark brown

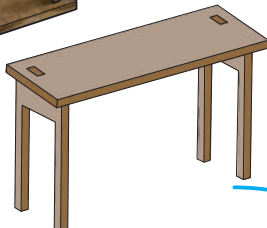

Cabin (medium)


Bench

12 <Assemble small articles of the shop>




Paint: Oil stain: Dark brown



«Stand»

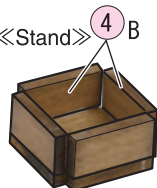



4 C

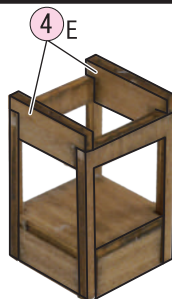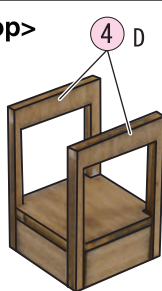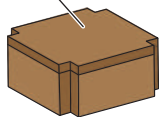

«Shelf»

Paint: Oil stain: Dark brown


● Cut out from the design paper and paste

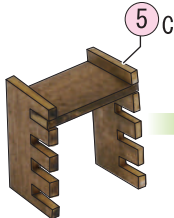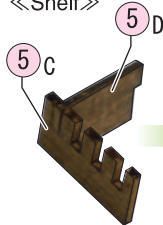

«Raised floor»

4

Tatami mat

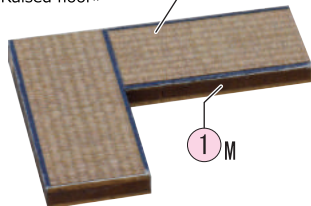

1 M



«Raised floor»



«Shelf»


«Stand»

13 <Attach the shop curtain of the shop cabin>




● Glue the shop curtain under the eaves

● Cut out from the design paper and paste

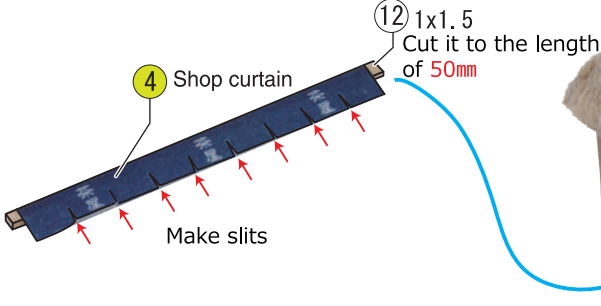

14 <Assemble rice bags>

● Cut out the rice bag portions from the design paper to wrap part ⑩

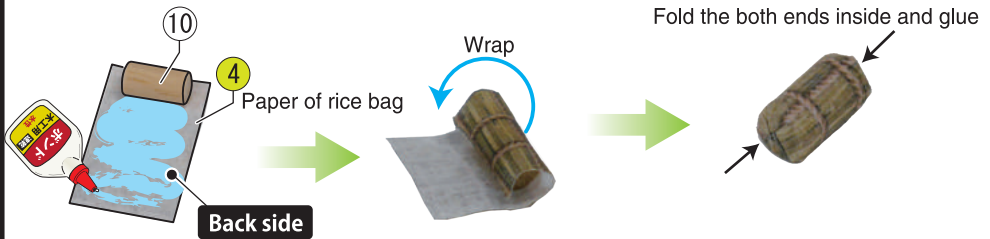

● Make 10 rice bags



● Pile up 5 bags each



Tip to advance

● Tie it up with ⑧ rope to make the figure much more real.






15 <Assemble the oxcart>



- Cut ⑪ $\phi 2$ to 22mm and put it through the holes of the wheels.



Make two sets Paint: Oil stain: Dark brown

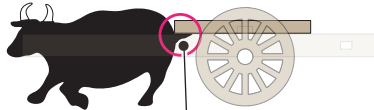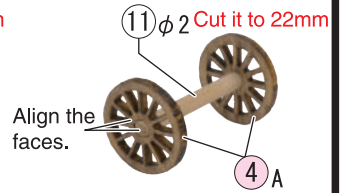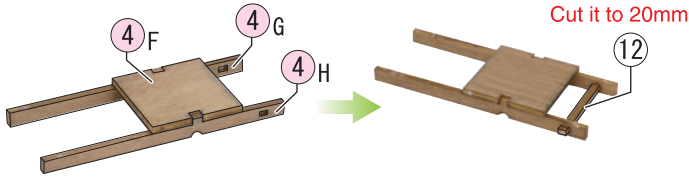

Put the cargo bed on the tail

- Glue the ricebags on the cargo bed
- Glue one thin hemp line from untwisted rope on the back of the cattle and the frames of oxcart.


Paint it in black except the horns

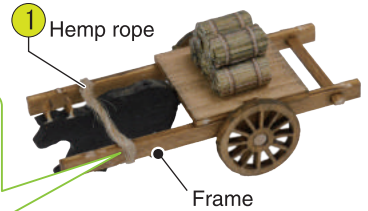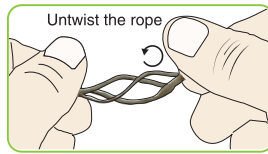

16 <Assemble the decoration base>




- Assemble the frame and glue the decoration base plate ⑮

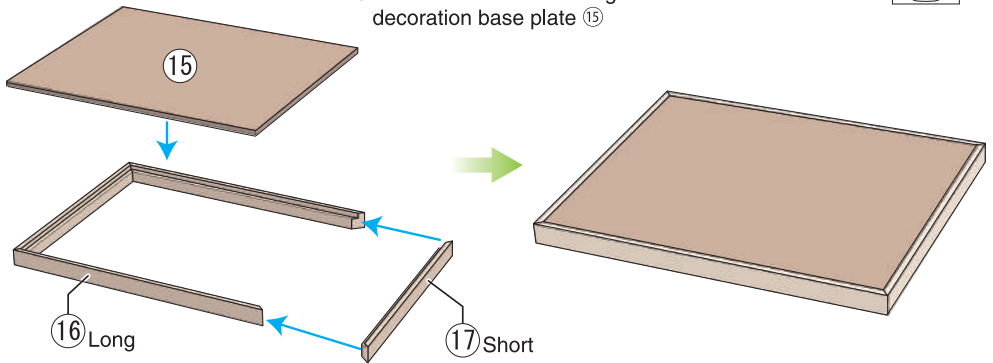

※ Cut it out along the peripheral line and paste it on the decoration base

Align with the edge of the decoration base plate

5 Pattern of the pavement stones

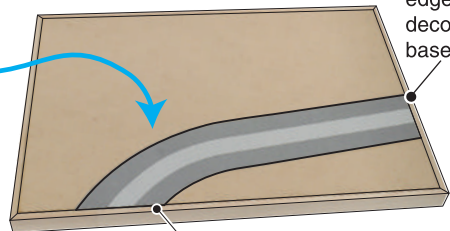


Align with the edge of the decoration base plate

17 <Attach pavement stones>



- Glue the pavement stones according to the layout sheet

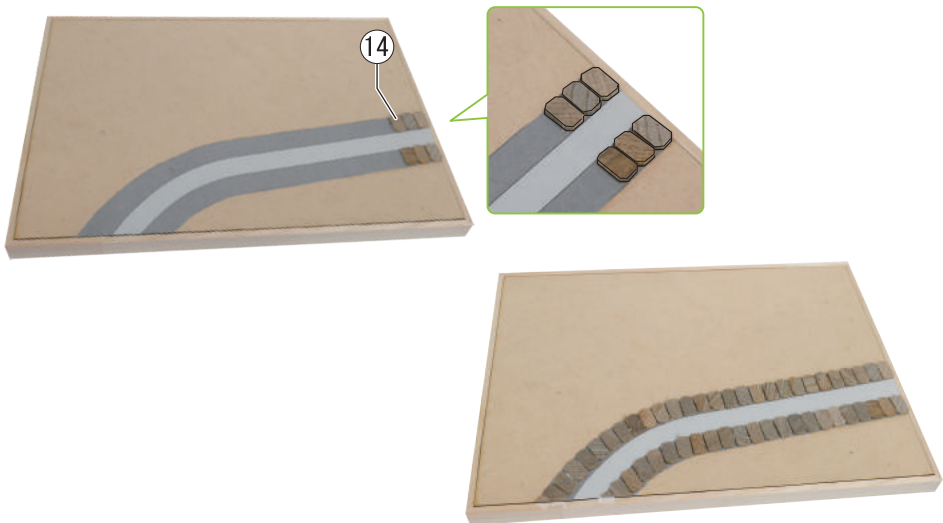


Option - Diorama set up -

[How to apply the color powder]

- Apply the woodworking bond thickly over the entire area.
- Spread earth color powder and sprinkle green powder over it in patches.
- Press the whole surface lightly and shake down the excess powders.

Color powder: Yellow ochre

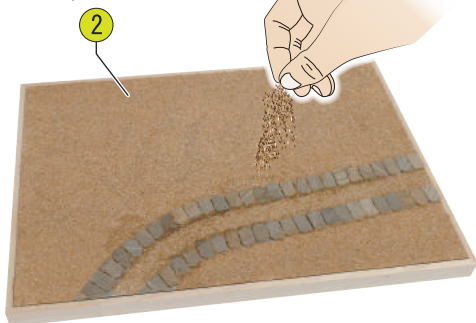

Color powder:
Pale green

(sold separately)




- Diorama materials are available as optional parts
To buy the parts, contact us directly or
purchase at our online shop:
<http://woodyjoe.shop-pro.jp>

18 <Assemble the signboard>






- Cut out the signboard from the design paper and paste it on (2) A.

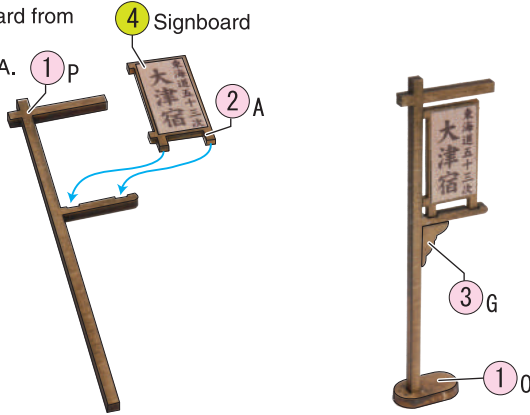

19 <Assemble the well>




- Pile and glue

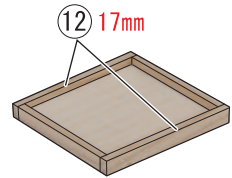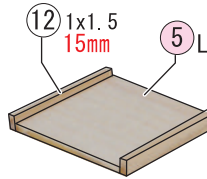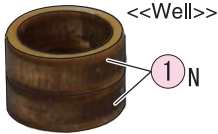


Glue the well on the center

※ Paint in gray

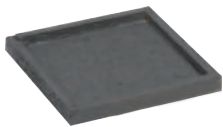

<<Well>>

- Cut out and place

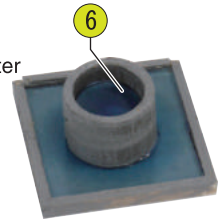


- Pour the woodworking bond in the well as much as it overflows.






[Assemble the washtubs]

Paint: Oil stain: Dark brown

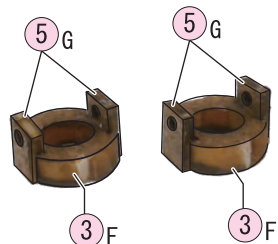

20 <Assemble the wall>

● Cut the stone materials small and glue

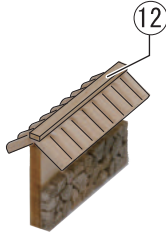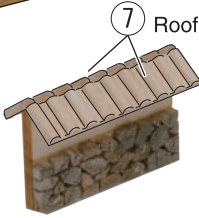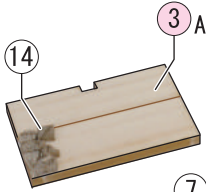

※ Paint in gray




21 <Arrange & Finish>

● Attach the wall so as to touch the shop wall



Wall

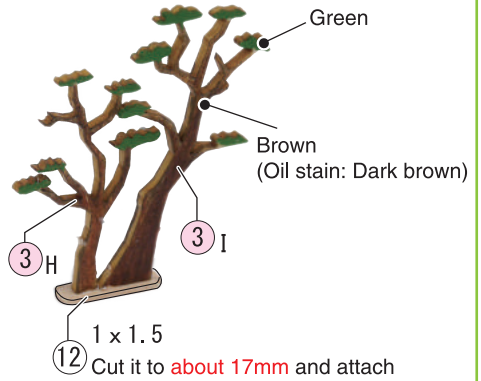

Signboard



Cabin (medium)

Cabin (small)

Paint (5) I as you like.



Well

Origin of the spring



Washtubs

Wall

Oxcart

Oxcart





● Arrange some dolls (sold separately) to enjoy more realistic atmosphere. Please contact us



1/150 figure: People in Edo town



● Please enjoy your own diorama